


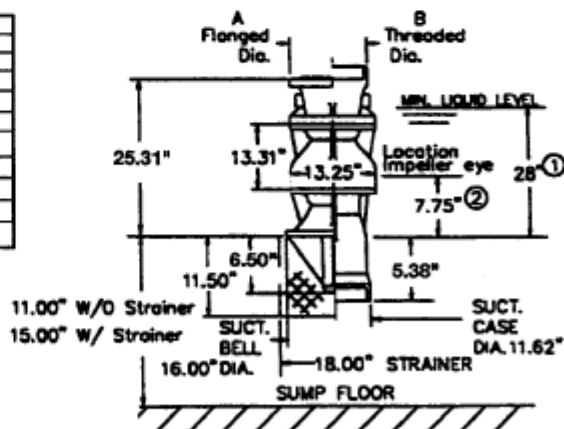

- (1) Minimum submergence required to prevent vortex formation. The submergence needed to provide adequate NPSH to the first stage impeller may be greater or less than shown. The larger of the two values must be used to determine actual minimum allowable submergence.
- (2) Location of eye of first stage impeller. Used to calculate NPSH. This is also the minimum priming submergence. (See note 1).
- (3) Vertical Impeller to Bowl running clearance after shaft stretch.

